


# HOOK-IN FOOTBOARD EXTENSION BRACKETS

## ASSEMBLY INSTRUCTIONS

### Parts List:

2 Footboard Extensions | 6 Lock Nuts | 6 Carriage Bolts | 6 Washers

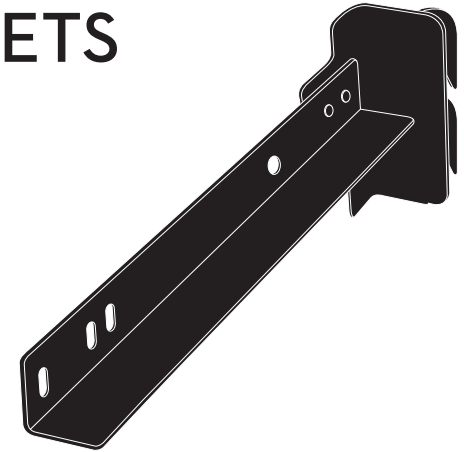

FOOTBOARD EXTENSION

### Step 1

Align Footboard extension with the three corresponding holes at the foot of the bed frame as shown in figure 1.

### Step 2


Thread Carriage bolts through each hole towards the outside of the frame. Pair each bolt with a washer and lock nut. Place the washers on the end of the bolt and hand-tighten each lock nut.

### Step 3

Repeat this step for the opposing foot of the bed frame.

### Step 4

Using the included wrench, tighten all the nuts and bolts until tight. (do not over tighten)

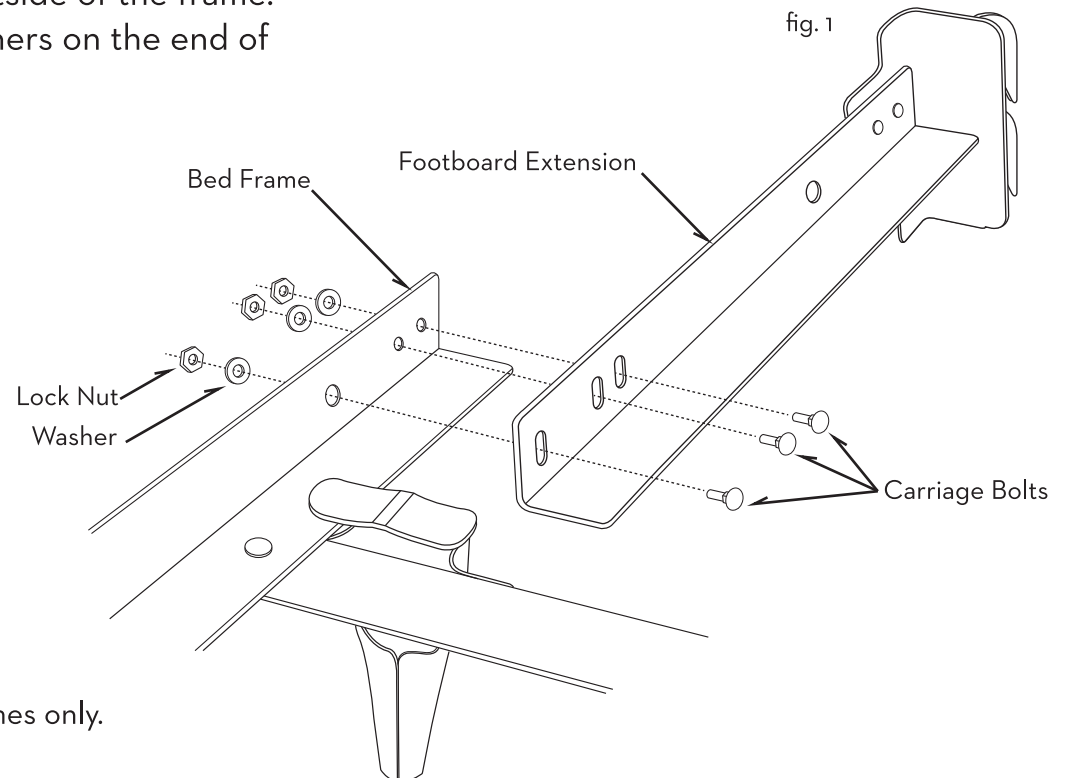

### Note:

Footboard extensions are meant for use with Structures™ bed frames only.  
Fits model ST6633BF and ST6633GL