

FOOTBOARD EXTENSIONS | UNIVERSAL | TWIN | FULL | QUEEN | KING ASSEMBLY INSTRUCTIONS

Parts List:


2 Footboard Extensions | 6 Lock Nuts | 6 Carriage Bolts | 6 Washers

Step 1

Align Footboard extension with the three corresponding holes at the foot of the bed frame as shown in figure 1.

-Hole configuration 1 should be used for Queen or King size beds.

-Hole configuration 2 should be used for Twin or Full size beds.

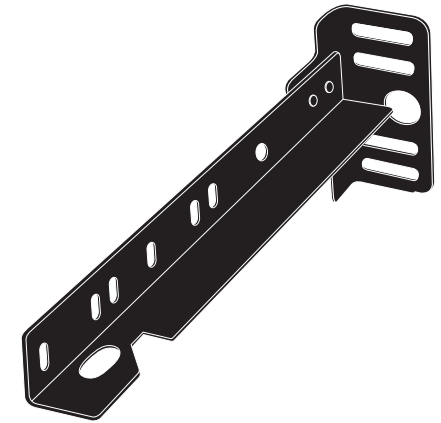

FOOTBOARD EXTENSION

Step 2

Thread Carriage bolts through each hole towards the outside of the frame.


Pair each bolt with a washer and lock nut. Place the washers on the end of the bolt and hand-tighten each lock nut.

Step 3

Repeat this step for the opposing foot of the bed frame.

Step 4

Using the included wrench, tighten the nuts and bolts the rest of the way.

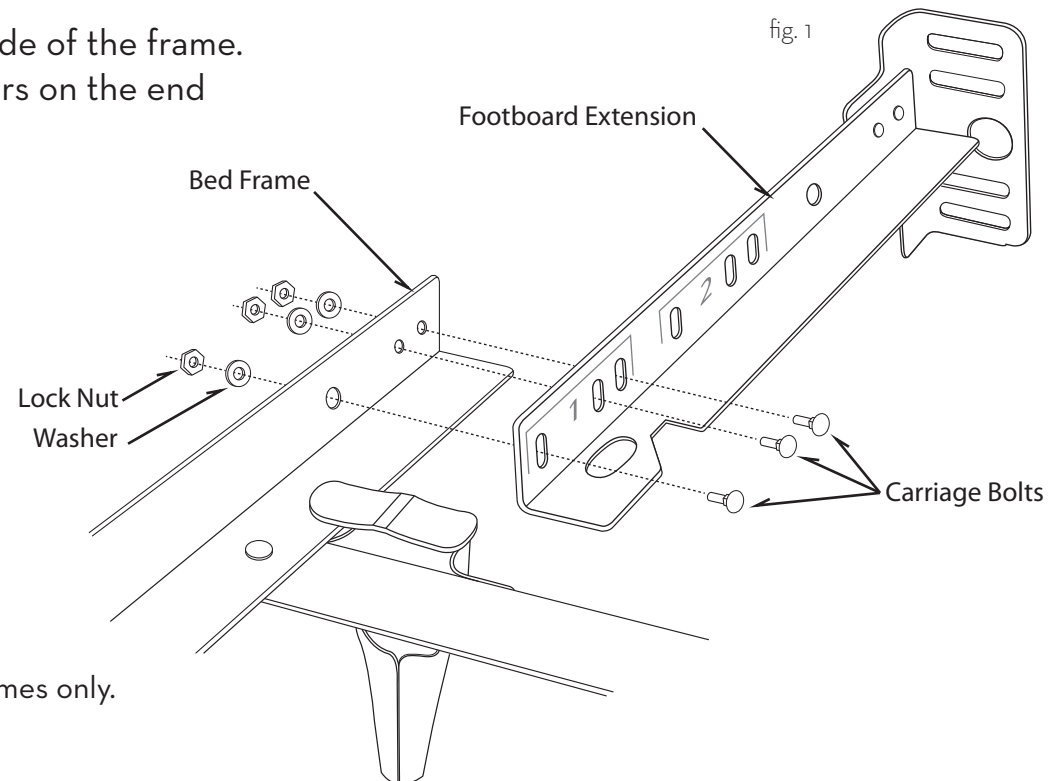

Note:

Footboard extensions are intended for use with Structures™ bed frames only.

Fits models **ST5O33BF**, **ST5O33GL**, **ST6633BF** and **ST6633GL**